

# **Standard Operating Procedure**

## **Ultrasonicator**



National Centre for Photovoltaic Research and Education  
Indian Institute of Technology Bombay

1. Fill water to the desired level in the tank.
2. Switch on the power supply.
3. Switch on power button on the ultrasonicator.
4. Set the required time and temperature.
5. Click Start.
6. Ultrasonicator automatically stops if the time is set.
7. Else, click on stop.
8. Switch off the power supply.
9. Remove the water from the tank.